




Parts Index

* not to scale

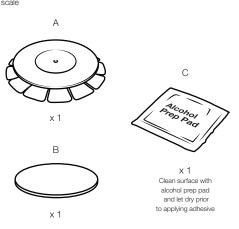

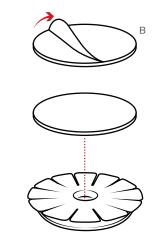



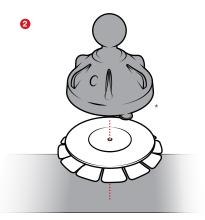

*Allow at least 24 hours for adhesive to fully bond to surface before mounting your device.

RPR-INS-350



Safety Precaution

Do not install this product near or over an airbag deployment area or in a location that obstructs the driver's vision or interferes with vehicle operation. National Products, Inc does not assume responsibility or liability for any such personal injury, death or property damage.